


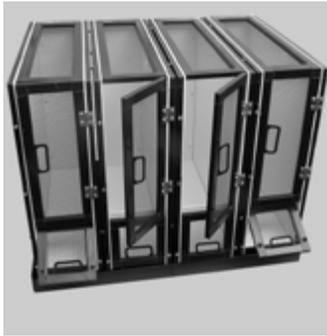

Assembly Instructions: Nursery Cage System

Packing List :

Carefully unpack the box and find each item.



4 * Individual Cage Parts:

- (A) Back Panel
- (B) Right Panel (with hinges attached)
- (C) Bottom Frame
- (D) Left Panel (with tabs attached)
- (E) Top Panel
- (F) Plastic Floor Panel
- (G) Service Door
- (H) Door



4 * Screw Pack
Each Pack Contains:
16 x 3/4" Screws
4 x 1/4" Screws



4 * Vine
Holder
Bags



Drainage Tray
*(The tray may be under
a cardboard buffer piece
that looks like the bottom
of the box)*

Tools Needed for Assembly:

Phillips Head Screwdriver
Scissors (to unwrap parts)
Bowl (to hold screws)

Caution 1: Do not over-tighten screws! Tighten the screw until it is fully seated in the frame and stop turning when the screw is tight. Forcing the screw beyond this point will strip the hole.

Caution 2: Beware of slipping with the screwdriver and punching a hole in the screened panels. Tighten the screws firmly and deliberately, but do not rush yourself or press harder than necessary.

Success Hint: Open a screw bag only when it is required and store screws in a bowl.

Assembly Note: Except for the Bottom Frame, the panel side with the sticker is the inside of the cage.

Assembly Note: Rattling inside a cage frame is normal and can be ignored. This is the pop rivet end.

Pre-Assembly: Attach Vine Holders and Misting Nozzle Hardware


A) Optional Misting Nozzle Hardware: If you decide to use a misting system and are using misting nozzle mounting hardware (purchased from the misting nozzle manufacturer) then install the hardware at this time.

B) Attach Vine Holders: These attach to the top panel and will provide a convenient anchor to loop artificial vines. Find the two pre-drilled holes on the Top Panel (E) and attach the vine holders using the screws included in the vine holder bag. If one of the pre-drilled holes is covered by a misting nozzle mounting wedge then you have to option of leaving that vine holder off or placing the vine holder in another location and firmly screwing it in place using the self-tapping screw.


C) Remove Stickers: If you desire to remove the frame stickers, carefully pry as much off as possible and use Goo Gone or WD-40 to rub off the adhesive.



Optional Mist Nozzle
Mounting Hardware

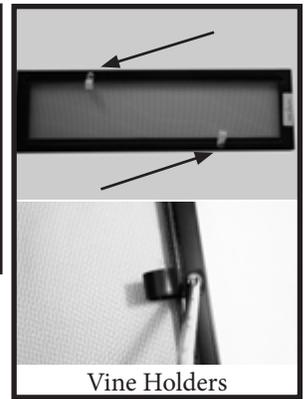

Vine Holders

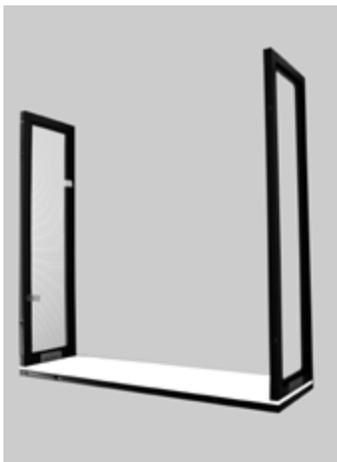

1) Construct cage core with Back Panel (A), Top Panel (E), and Bottom Frame (C). Use 3/4" screws from cage screw bag. Bottom Frame sticker is on outside. Other panels are installed with stickers on inside.



2) Add Side Panels (B) and (D) with 3/4" screws. Stickers are on the inside top of the panel. Attach to Top Panel (E) first to avoid slipping and possible screen damage to Top Panel.



3) Complete Front by first installing the Service Door (G) with two 3/4" screws from the sides. Finally, lay the door in and use four flathead 1/4" screws to attach to hinges.
4) Slide in Floor Panel (F)

Repeat four times and sit your cages in the Drainage Tray to complete your Nursery Cage System!