



Assembly Instructions: X-Large Breeder Cage

Packing List :

Carefully unpack the box and find each item.

Cage Panels:

- (A) Back Panel
- (B) Right Panel (with hinges attached)
- (C) Bottom Frame
- (D) Left Panel (with tabs attached)
- (E) Top Panel
- (F) Plastic Floor Panel (2)
- (G1) Upper Face Panel
- (G2) Service Door
- (H) Door



5 *Dragon Ledges



15 x
1"

Screw Pack
(Dragon Ledges)



26 x
3/4"

4 x
1/4"

Screw Pack
(Cage)



Vine Holders

Tools Needed for Assembly:

- Phillips Head Screwdriver
- Scissors (to unwrap parts)
- Bowl (to hold screws)

Caution 1: Do not over-tighten screws! Tighten the screw until it is fully seated in the frame and stop turning when the screw is tight. Forcing the screw beyond this point will strip the hole.

Caution 2: Beware of slipping with the screwdriver and punching a hole in the screened panels. Tighten the screws firmly and deliberately, but do not rush yourself or press harder than necessary.

Success Hint: Open a screw bag only when it is required and store screws in a bowl.

Assembly Note: Except for the Bottom Frame, the panel side with the sticker is the inside of the cage.

Assembly Note: Rattling inside a cage frame is normal and can be ignored. This is the pop rivet end.

Pre-Assembly: Attach Dragon Ledges, Misting Nozzle Hardware, and Vine Holders

A) Install Dragon Ledges: Install five white Dragon Ledges on pre-drilled holes


B) Misting Nozzle Hardware: Misting nozzle mounting hardware must be purchased from the misting nozzle manufacturer. If you are using a misting system and are using a support wedge please install the hardware at this time.

C) Attach Vine Holders: These attach to the top panel and will provide a convenient anchor to loop artificial vines. Find the two pre-drilled holes on the Top Panel (E) and attach the vine holders using the screws included in the vine holder bag. If one of the pre-drilled holes is covered by a misting nozzle mounting wedge then you have to option of leaving that vine holder off or placing the vine holder in another location and firmly screwing it in place using the self-tapping screw.


D) Remove Stickers: If you desire to remove the frame stickers, carefully pry as much off as possible and use Goo Gone or WD-40 to rub off the adhesive.



Dragon Ledges

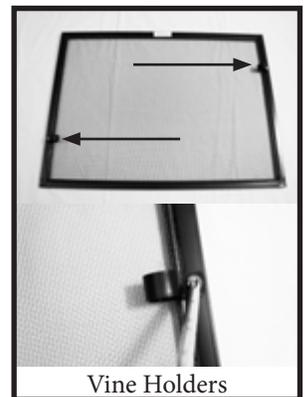

Vine Holders

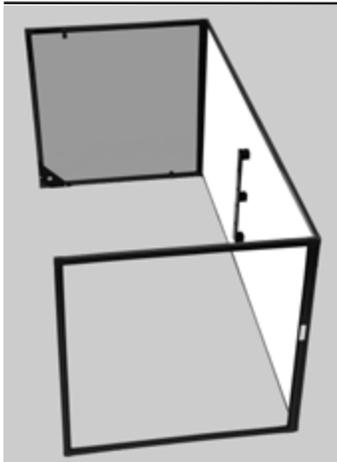

1) Construct cage core with Back Panel (A), Top Panel (E), and Bottom Frame (C). Use 3/4" screws from cage screw bag. Bottom Frame sticker is on outside. Other panels are installed with stickers on inside.



2) Add Side Panels (B) and (D) with 3/4" screws. Stickers are on the inside top of the panel. Attach to Top Panel (E) first to avoid slipping and possible screen damage to Top Panel.



3) Complete Front by first installing the Service Door (G2) with two 3/4" screws from the sides. Then install the Upper Face Panel (G1). Finally, lay the door in and use four flathead 1/4" screws to attach to hinges.
4) Slide in Floor Panel (F)

Your X-Large Breeder Cage is complete!